

R-22 Units in Stock!

We also have R-22 Coils and Air Handlers for "service use."

Single Phase 208-230 volt sizes:

1.5 thru 5 tons

Three Phase 208-230 volt sizes:

3, 4, 5, 7.5 & 10 tons

What is an "Uncharged" R-22 unit?

By law, it has no R-22 refrigerant in it.
It does have a Nitrogen holding charge.
That is the only change.

It is the same GSC13 model you have been installing since 2006.



What is different about the install?

- 1) You need to open the service valves before evacuating the system.
- 2) Weigh in the nameplate charge, which is the unit charge and enough refrigerant for 15 feet of lineset.
- 3) Follow standard charging procedures, per installation manual.

Remember to always check the indoor equipment for proper operation.

Do you need....

- ... a drum of R-22 to charge the unit?
- ... Rx11 Flush to clean the lineset?
- ... tamper-proof refrigerant caps? (Code required in NJ & MA)
- ... pad, disconnect, whip?
- ... tools?

The fine print:

Units must only be used as replacement components for pre-2010 installed systems.